




## Location of Serial # on AHT Liftgates (4 Places)

All Serial #'s are 3 or 4 digits

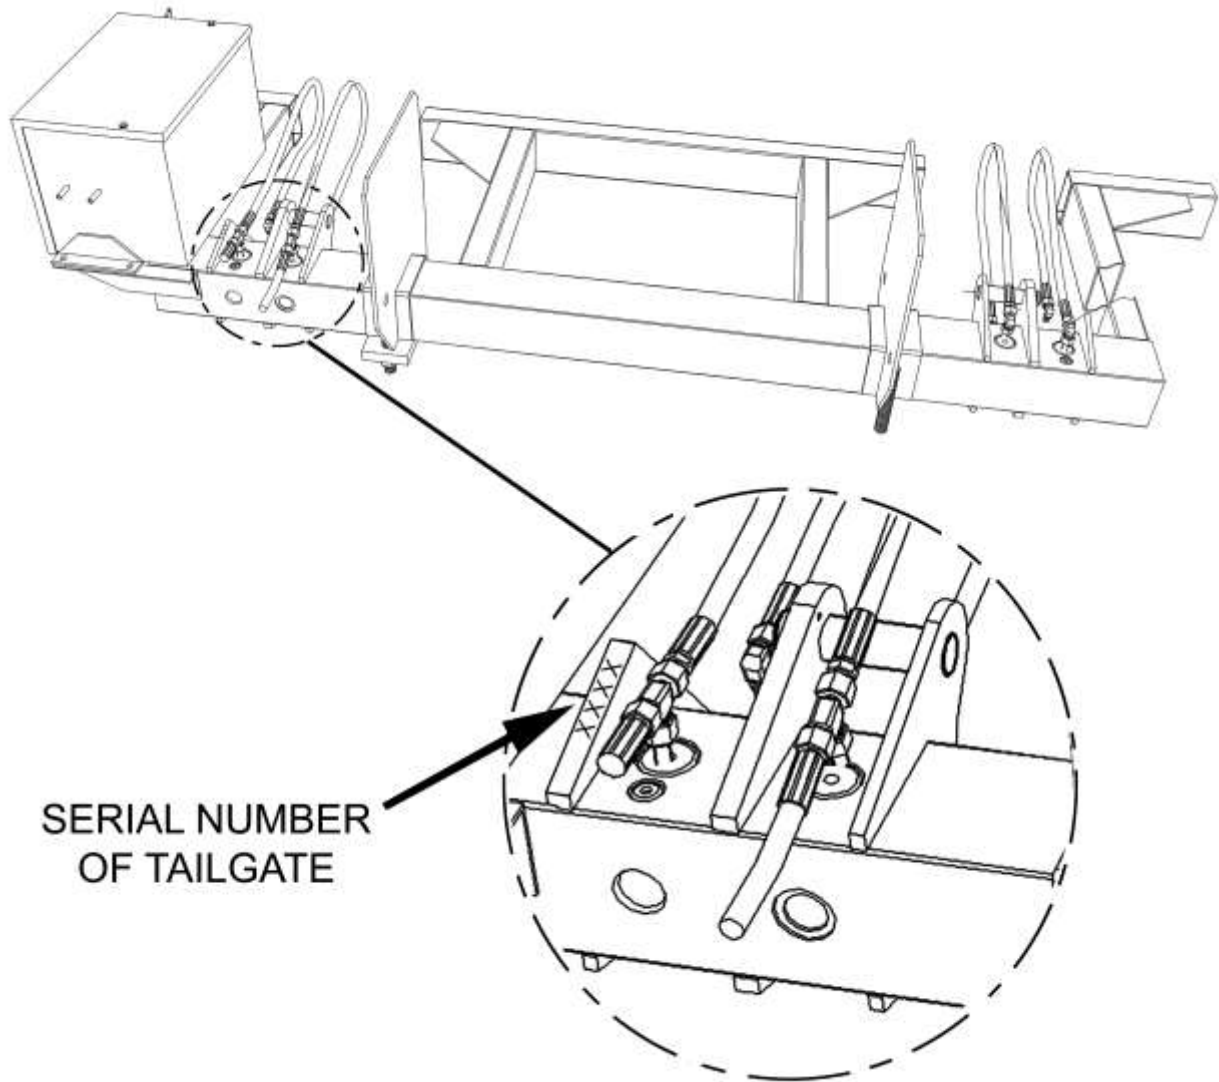

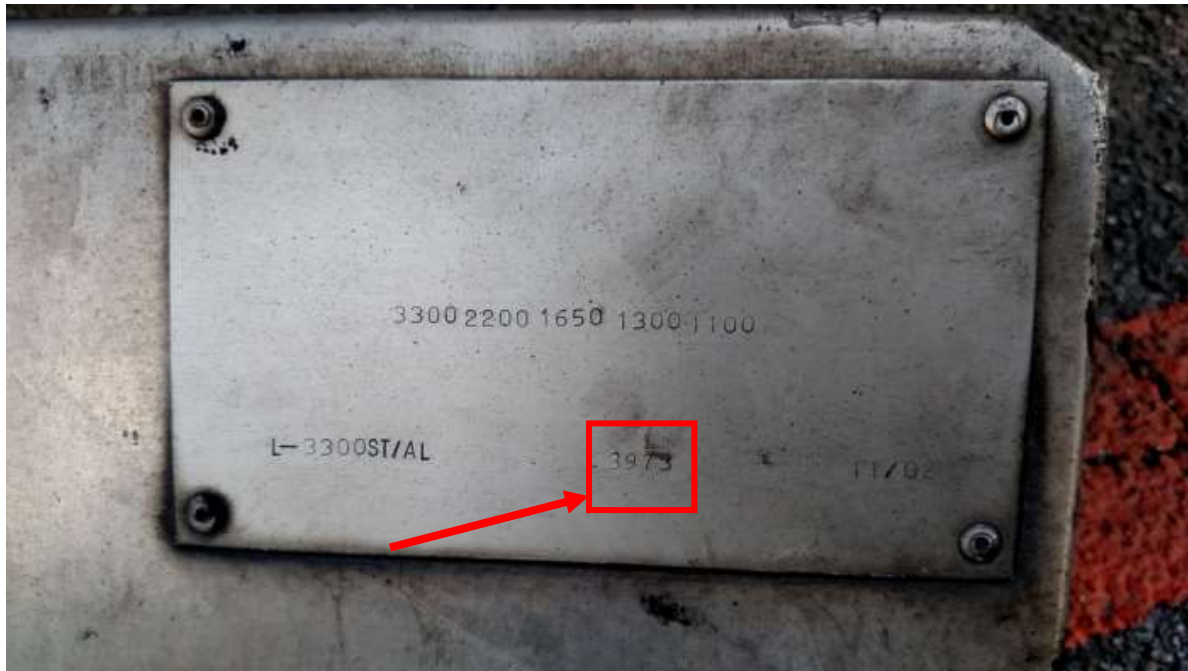

Mounted on metal plate riveted to the outside power pack cover or on older gates riveted on bumper bar near control box.

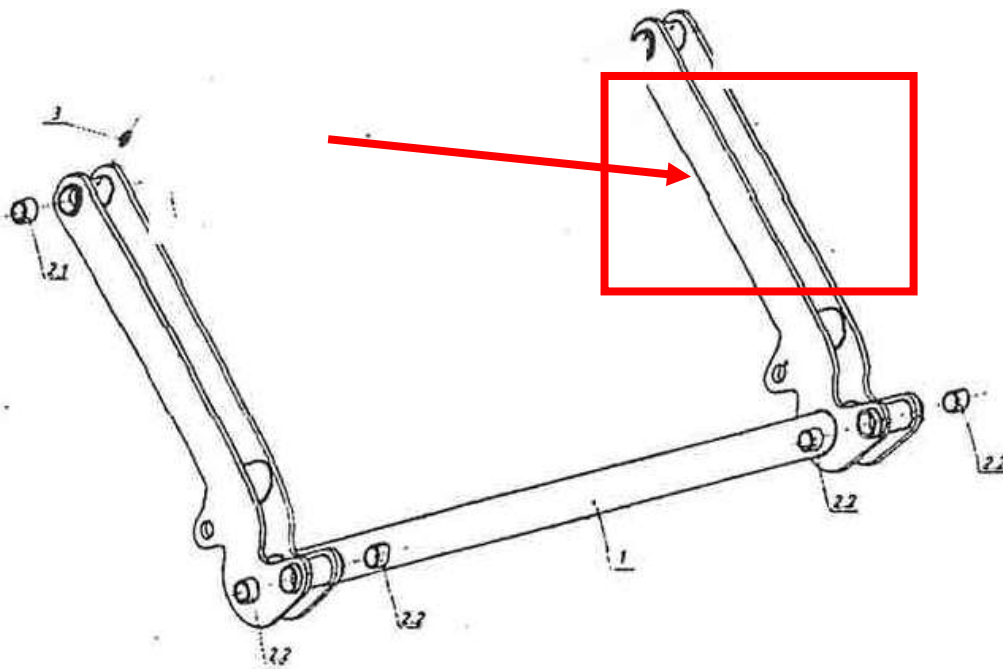

Stamped on flat surface on Lift Arm on Power Pack side



Stamped in right lower area of platform (Platform Closed)