



AHT Liftgates, LLC

309 Mogie Ln.

Acworth, Ga. 30102

(770) 425-5480

E-Mail: parts@ahtliftgates.com

Web: www.ahtliftgates.com

STEEL TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	CORRECTION
REMOTE CONTROL NOT WORKING - MASTER CONTROLS WORKING	1) Remote control not working	- Replace remote
	2) Spiral cable on remote defective	- Replace with new remote w/spiral cable
	3) Contacts are defective	- Check contact blocks in remote. Replace if defective
REMOTE "DOWN" NOT WORKING. MASTER CONTROLS WORKING	1) Remote control cable is defective	- Repair or replace remote control cable
	2) Down contact is defective	- Repair or replace DOWN contact
REMOTE "UP" NOT WORKING. MASTER CONTROLS WORKING	1) Remote control cable is defective	- Repair or replace remote control cable
	2) Down contact is defective	- Repair or replace UP contact